




English

IMPORTANT NOTICE

Notes on connecting to the HDMI OUT jack

Observe the following as improper handling may damage the HDMI OUT jack and the connector.

- Carefully align the HDMI OUT jack on the rear of the player and the HDMI connector by checking their shapes. Make sure the connector is not upside down or tilted (as shown **A**).
- Be sure to disconnect the HDMI cable when moving the player (as shown **B**).
- If you place the player on a cabinet with the HDMI cable connected, do not apply too much pressure to the cabinet wall. It may damage the HDMI OUT jack or the HDMI cable.

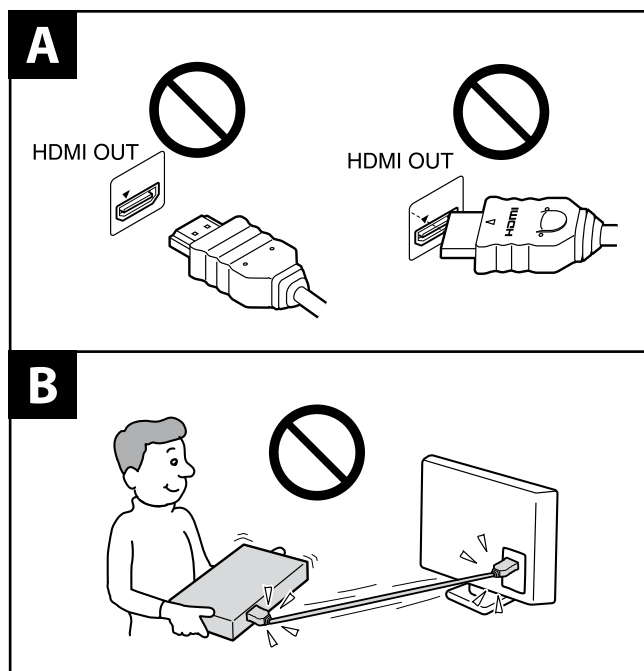


Notes about lens/disc cleaners

- Clean the disc with a cleaning cloth. Wipe the disc from the center out (as shown **C**).
- Do not use lens cleaning disc.

Note about the LAN (100) terminal

Do not connect a phone line to the LAN (100) terminal, as it may cause a malfunction.

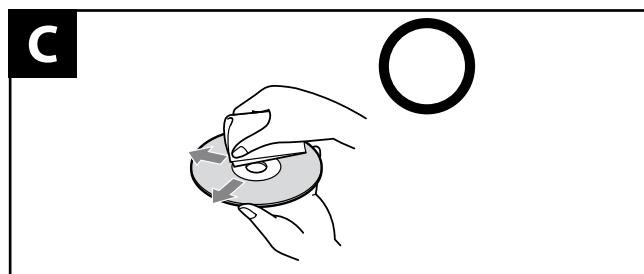

For any inquiries,

Please call **1-877-899-SONY (7669)** or visit the Sony Web Site:


<http://esupport.sony.com/>

AVIS IMPORTANT

Remarques sur le raccordement à la prise HDMI OUT


Respectez les points suivants, car une manipulation inadéquate peut abîmer la prise HDMI OUT et le connecteur.

- Alignez soigneusement la prise HDMI OUT, qui se trouve à l'arrière du lecteur, au connecteur HDMI, en vérifiant leur forme respective. Assurez-vous que le connecteur n'est pas à l'envers ou incliné (tel qu'illustré **A**).
- Avant de déplacer le lecteur, n'oubliez pas de déconnecter le câble HDMI (tel qu'illustré **B**).
- Si vous placez le lecteur sur un meuble avec le câble HDMI branché, n'appliquez pas une pression excessive sur la paroi du meuble. Cela risquerait d'abîmer la prise HDMI OUT ou le câble HDMI.

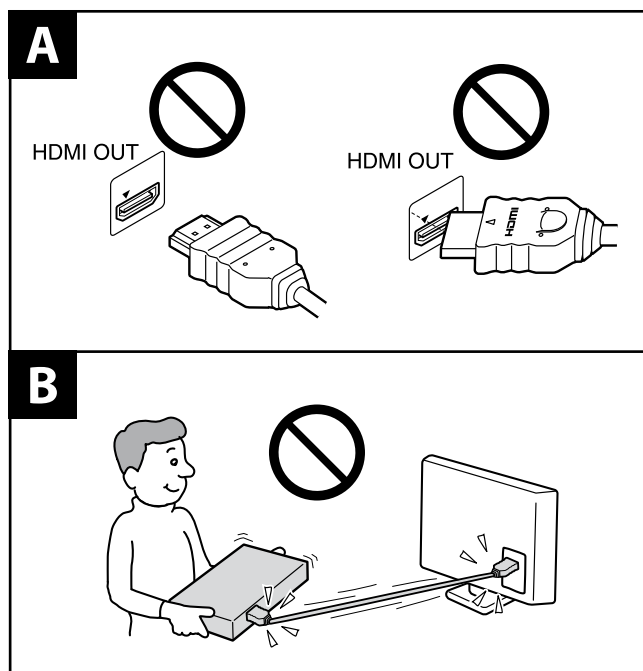

Remarques sur le produit de nettoyage pour disques ou objectifs

- Nettoyez les disques à l'aide d'un chiffon doux. Essayez le disque du centre vers la périphérie (tel qu'illustré **C**).
- N'utilisez pas de disque de nettoyage pour lentille.

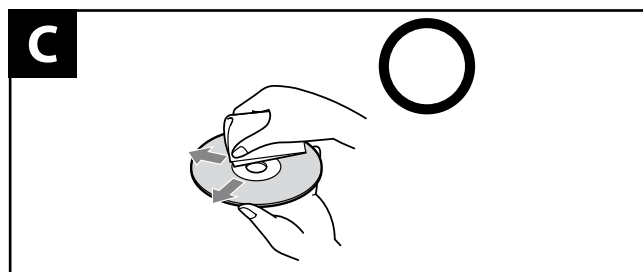

Remarque sur la borne LAN (100)

Ne connectez pas une ligne de téléphone à la borne LAN (100), car cela pourrait causer un dysfonctionnement.

Pour toute demande d'information,

Prière d'appeler au **1-877-899-SONY (7669)**
ou de visiter le site

Web de Sony : <http://esupport.sony.com/>